


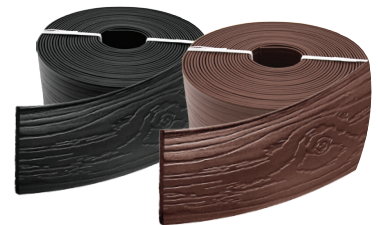

## 1. Sunlight

Remove all packaging. Unwind edging and lay in sunlight prior to use (this will soften edging for installation).




## 2. Plan Design

Plan your landscape design. A garden hose or rope may be used as a guide.



## 3. Trench

Lightly trench with shovel (to desired depth) along your landscape design. Place edging inside trench.

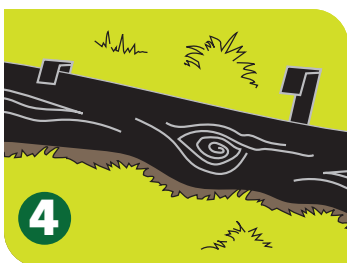

## 4. Stake and Trim

Secure edging with Terrace Board™ Stakes every 4 feet (2 feet for curves). Trim excess edging with fine tooth saw. Back fill with dirt or landscape material.

### TOOLS REQUIRED

work gloves • safety glasses • shovel • mallet • fine tooth saw

