



ORIGINAL

PLUS

PRO

CLASSIC

Landscape Edging

INSTALL GUIDE

Always wear safety glasses when cutting, staking and installing landscape edging.



1



2



3

Place the edging in sunlight for at least 30 minutes before installation, securing each end with a weight. This allows for thermal expansion and helps straighten the edging.

Using a shovel or garden spade, dig a trench, maintaining a consistent depth throughout. Insert the edging into the trench, positioning it against the grass.


Anchor the edging with stakes every 4 feet (every 2 feet for curves). Drive the stakes at an angle from the dirt side. Backfill with dirt or landscape material.

HELPFUL TIPS

Staking your edging is crucial to keep it securely in place over time.

Connecting Edging:

For a seamless look, trim a section of the bead from one piece, add a connector, then join and overlap the pieces for a secure fit.

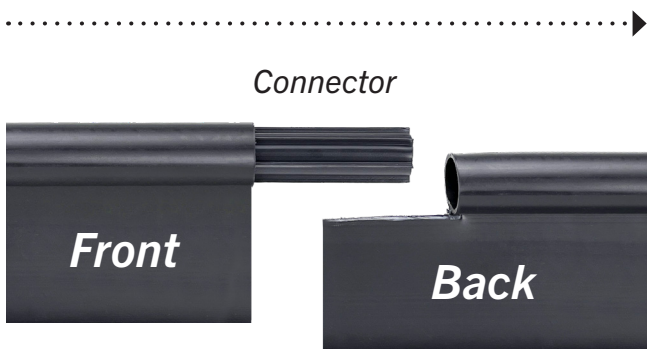

Cutting Edging:

Cut edging with garden shears, snips, or a fine-tooth saw.



MADE IN USA
FROM RECYCLED MATERIALS

Questions/Comments? Email us at:
CustomerService@AvonPlastics.com




HELPFUL TIPS Maintain a consistent trench depth for best results.

Creating Corners:

To connect edging at a 90° angle, use a Corner Connector (sold separately).

Corner Connectors are available in PLUS and PRO series only.

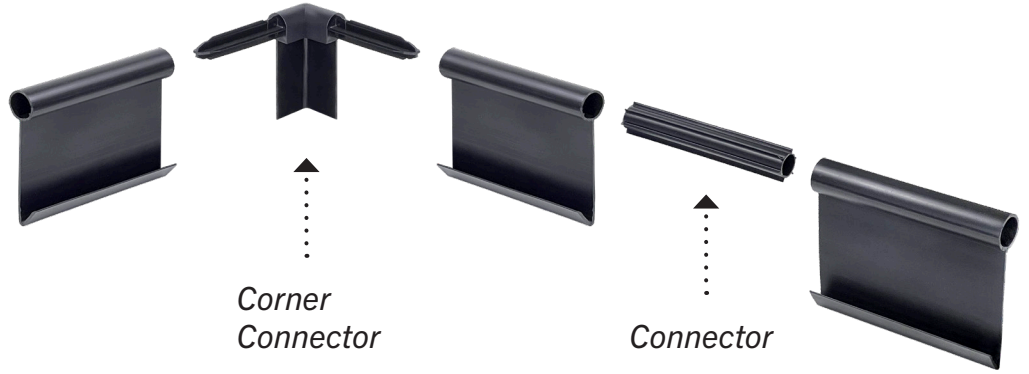

CLASSIC LANDSCAPE EDGING AND ACCESSORIES Products sold separately.



MADE IN USA
FROM RECYCLED MATERIALS

Questions/Comments? Email us at:
CustomerService@AvonPlastics.com

