



# DIG-FREE<sup>®</sup>



## Poundable Scallop Edging

### INSTALL GUIDE

Always wear safety glasses when cutting, staking and installing landscape edging.



1

Place the edging pieces on the ground in front of the installation area. Connect the pieces by sliding each one in from the top.



2

Position the edging upright and align it over the installation area.



3

Using a rubber mallet, pound the edging into place, ensuring each piece is securely set into the ground.

### HELPFUL TIPS

When installing in hard or compacted soil, trench the area first, then install.


#### To Connect Edging:

Slide each piece in from the top to connect the edging, and continue until you reach the desired length.



#### Corner Connector:

Included in each box is one corner connector that can be used to form a 90° angle.

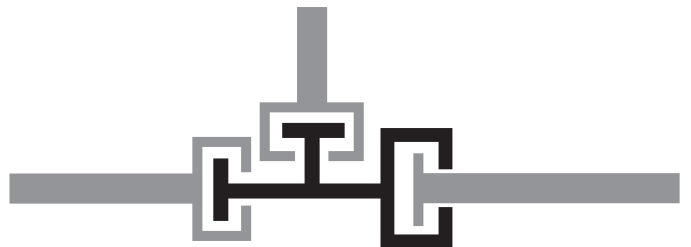

**MADE IN USA**  
FROM RECYCLED MATERIALS

Questions/Comments? Email us at:  
[CustomerService@AvonPlastics.com](mailto:CustomerService@AvonPlastics.com)

