


LANDSCAPE EDGING KIT

BEFORE INSTALLING:

REMOVE STAKES AND CONNECTORS:

Cut the stakes and connectors from the plastic molding using scissors.

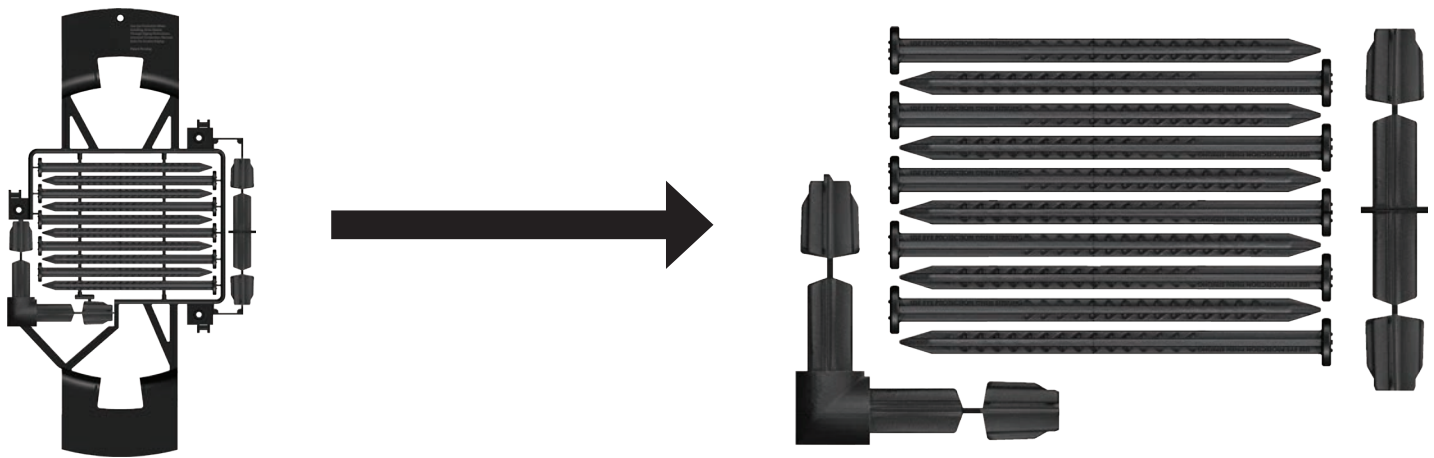


UNIVERSAL CONNECTORS:

Connectors are designed to fit two edging sizes: 5" tall or 4.5" tall (check the height on the label of your edging). Trim the connector ends if using 4.5" edging.



*Trim here to fit
4.5" edging*

*Trim here to fit
4.5" edging*

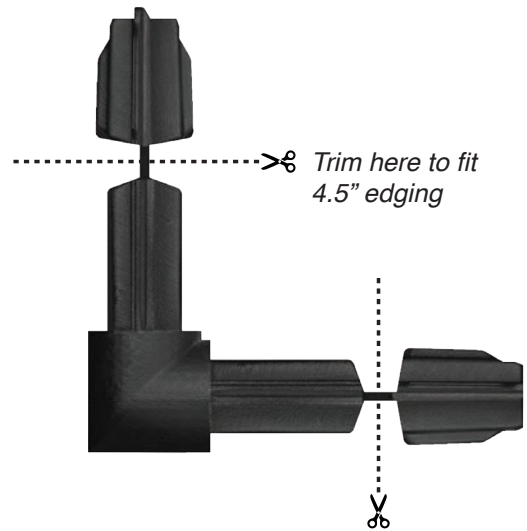

*Trim here to fit
4.5" edging*

*Trim here to fit
4.5" edging*

TOOLS NEEDED TO INSTALL: Safety Glasses, Shovel, Hammer

LANDSCAPE EDGING KIT

INSTALLATION GUIDE

⚠ WARNING: WEAR SAFETY GLASSES USER AND BYSTANDER.



1. Place the edging in sunlight for at least 30 minutes before installation, securing each end with a weight. This allows for thermal expansion and helps straighten the edging.




2. Using a shovel or garden spade, dig a trench, maintaining a consistent depth throughout. Insert the edging into the trench, positioning it against the grass.



3. Anchor the edging with stakes every 4 feet (every 2 feet for curves). Drive the stakes at an angle from the dirt side. Backfill with dirt or landscape material.

CONNECTING EDGING:

For a seamless look, trim a section of the bead from one piece, add a connector, then join and overlap the pieces for a secure fit.

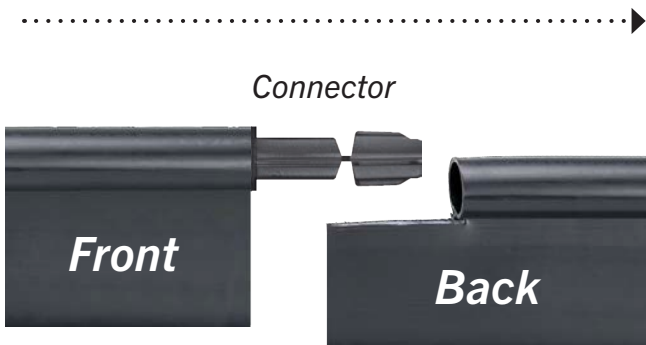

CUTTING EDGING:

Cut edging with garden shears, snips, or a fine-tooth saw.

